展开518x210mm-80G书写纸-双面印-单黑-先竖6折7页 再横对折 总共28页

封面

封底

NOW:GO™

ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

USER MANUAL

F8 HIGH POWER OUTDOOR 户外 speaker PORTABLE BLUETOOTH SPEAKER

English

Important Tips

1. Please read and follow this user manual .
2. Please store and use this product in a room temperature environment .
3. Do not use this product in high temperature environments, such as in direct sunlight, near open flames, or other similar environments .
4. Please do not throw it away to avoid damage to this product due tofalling.
5. If the cable does not match your device, please contact the seller .
6. Please adjust the speaker to an appropriate volume to avoid damage to your hearing.
7. No matter why the equipment is damaged, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty.
8. This product is manufactured from high-performance materials and components that are recyclable. Do not dispose of this product with other household waste. Please understand local regulations on the separate collection of electronic and electrical equipment and batteries. Your correct disposal of these products is a contribution to protecting the environment, human health, and saving and rational use of natural resources.

Product features

1.40W high-power
66MM full-range speakers and 2 passive radiators, giving you a three-dimensional and shocking hearing with dual tweeters. It uses a higher-quality double vortex diaphragm to produce full treble and shockingbass, giving you a heart-pounding experience.

2.IPX6-waterproofIPX6 waterproof, no need to worry about rain or liquid splash, even ifcamping, and outdoor parties, it accidentally falls into the water, theres no need to worry. It is the perfect companion for beaches.

3.5200mAH large battery
12 hours working time (intermediate volume); powebankwhen travelingoutdoors, relieving battery anxiety.

4. Bluetooth 5.3
Using new generation Bluetooth 5.3 version chipset ; Compared with the previous generation version, the Bluetooth connection is faster and more stable, with stronger anti-interference and lower powerconsumption, providing you with a high-quality lossless musicexperience.

5. Magic light effect
Colorful, racing cool lights, the light moves with the sound, giving youa dual enjoy ment of listening, feeling and viewing, experiencing a moreluxurious visual experience, igniting the atmosphere of the whole venue andsublimating the music effect.

6. Three sound effect modes
The sense of ritual is never absent, igniting a new rhythm. One speakeris a symphony orchestra, There are three sound effect modes: normalclassical, and bass. The three sound effects are accurately adjusted byprofessional sound engineers. Bringing you an environment immersedin pure music.

7. Djustablestrap Rope
Equippedwith precision woven adjustable straps, which can be carriedon the back sturdy and durable . Provide lightweight and easy travelequipment for travelers who love life, creating an ideal companion fortravel and entertainment.

8. Supports hands-free calls
Long press the play button to activate the voice assistant function.Supports answering incoming calls. Short press the play button toanswer the call. Long press to reject the call. Short press to hangup during the answer. Long press to switch to the mobile phone toanswer the call.

9.4 playback modes
Support Bluetooth, AUX,TF card playback andTW wireless connectionalso supports MP3, APE, FLAC, WAV, WMA lossless format playback.

Products And Accessories

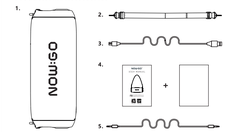

1. Speaker
2. Adjustable strap rope
3. USB power cable/data cable
4. Product manual
5. AUX audio cable

Body Button Functions



① **Power button**
1. Power on: Press and hold for 3 seconds.
2. Shut down: press and hold for 3 seconds.

② **light button**
Short press the light button to switch the light mode, mode 1-mode2-mode 3- turn off the light.

③ **light button**
Short press the light button to switch the light mode, mode 1-mode2-mode 3- turn off the light.

④ **PLAY/PAUSE button**
1.Pause: short press the "PLAY/PAUSE" button in the BluetoothTF playback state to pause playback; short press the "PLAY/PAUSE" button in the AUX playback state to mute playback.
2. Answer incoming calls: If there is an incoming call, short press the "PLAY/PAUSE" button to answer the call .
3. Reject the call: Press and hold the "PLAY/PAUS" button for 2S to reject the call.
4. End the call: Short press the "PLAY/PAUSE" button during the call to hang up the call.
5. Voice assistant: Press and hold "PLAY/PAUS" for 3S to activate the voice assistant function.
6.TF folder switching: In the playback state of TF card, press and hold for 3 seconds to switch to the next folder

⑤ **Volume +/next song**
1. Increase volume: short press
2. Next song: long press

⑥ **Volume -/Previous song**
1. Volume down: short press
2. Previous song: long press



⑥ **TYPE-C interface**
For the Type-C charging interface, please use a 5V/2A power adapterto charge the speaker.

⑦ **TF card interface**
Insert the TF card into the TF card interface and automaticallyplay the TF card music .

⑧ **AUX audio interface**
Plug the 3.5mm audio cable into the AUX audio interface and automatically play the music provided by AUX.

Automatic shutdown:
1.It will automatically shut down after 15 minutes if there is noconnection in the powered on state.

Intelligent power-saving mode:
1. The battery indicator light turns off automatically after turning on for 5 seconds.
2. Press the speaker button anytime during use, the battery indicator willlight up for 5 seconds and automatically turn off. The indicator lightwill stay on during charging.

Power saving mode:

When thespeakeris turned on:
1. When 6%<battery level<20%, LED1 red light is on
2.When20%<battery level<30%, LED1 white light is always on
3.When30%<battery level<50%, LED1、LED2 white light are always onat the same time
4.When50%<battery level<75%, LED1、LED2、LED3 white light arealways on at the same time5.When75%<battery level<100%, 4 LED white light are always on atthesame time

Charging capacity display

charging:
1. When Battery level<15%, LED1 white light flashes
2. When 15%<battery level<50%, LED1 white light is always on and LED2 white light flashes
3. When 50%<battery level<75%, LED1、LED2 white lights are always on at the same time and LED3 white light flashes
4. When 75%%<batterylevel<99%, LED1、LED2、LED3 white lights are always on at the same time, LED4 white light flashes
5. When Battery level=100%, 4 LED white lights are always on at the same time

Reset

If the product crashes due to other factors, you can reset it by pressing and holding the power button for 10 seconds.
If you cannot connect via Bluetooth, press and hold the Bluetooth button for 8 seconds to clear the pairing record and restore the factory settings.

Bluetooth Connection



Pair the speaker with a Bluetooth-enabled tablet or smartphone.

1. Press and hold the power button to turn on the speaker, the blue light will light up; it will enter Bluetooth mode by default, and wait for Bluetooth pairing.
2. Find "Settings" on your smart device, turn on Bluetooth, and search for devices. Click on the searched 'NOWGO F8' in the Bluetooth device list to start the connection.
3. When the connection is successful, you will hear a prompt tone. Once connected successfully, you can play music or make hands-free calls on your Bluetooth device.
4. The effective distance of Bluetooth connection is about 30m, which varies depending on the environment. Music transmission may be interrupted by obstructions between meters .Please ensure that there are no obstacles between the speaker and the Bluetooth device; or try to change to another Bluetooth device for playback. There is no sound in the audio input mode. Please check whether the audio cable is connected correctly.the device and the speakers, such as walls, the device's metal casing, or other nearby devices operating on the same frequency.

Notes:

5. When the Bluetooth speaker is turned on, it will automatically connect back to the last connected device before shutting down. There is no need to search and pair Bluetooth again.
2. If you need to connect to other Bluetooth devices, short press the Bluetooth button to cut off the connection with the current device, and Bluetooth will return to wait for Bluetooth pairing.

Specification parameters

Model	F8
Speaker unit	66MM*2
Rated output power	40W
Bluetooth version	5.3
Play mode	BT/AUX/TF card
Music formats	MP3/WMA/WAV/APE/FLAC
Battery	5200mAh built-in rechargeable battery
Charging input	Type-c 5V/2A
Packaging size	231 mm*122mm*141 mm
Product volume	diameter 100mm*H260mm (excluding strap rope)
Product weight	Net weight 1460g

Common Troubleshooting Methods

Intermittent sound in Bluetooth mode	Make sure that the connection distance between the host and the Bluetooth device is within 10 meters. Interference from Wi-Fi signals between Bluetooth host and the Bluetooth device, or try to change to another Bluetooth device for playback.
The sound is intermittent in Bluetooth mode	Please check whether the audio cable is connected correctly. Please check whether the computer host sound card is operating. Or whether it is correctly connected to the corresponding audio output interface
Flash drive mode NoneSound/format error	Please check whether the format of the USB flash drive is FAT32.Please check whether the files in the USB flash drive card are APE, FLAC,MP3, WMA, WAV.
Buttons don't respond	Turn off the phone and charge it for 30 minutes before turning it on, or press and hold the reset button to reset and then turn it on again.
No sound from speaker	Try turning up the volume ; Please select the correct audio input channel; Please make sure all cables are connected correctly
There is noise on the speaker	Make sure all cables are properly connected; Or try to replace another audio cable. Make sure that there is no noise in the output of the device outside the audio cable.
Not charging	Please make sure the type-c charging cable is properly connected to the adapter and host; Please check whether the voltage and current of the power adapter meet the requirements ; Please ensure that the type-c charging cable and other devices can charge normally.
Bluetooth pairing failed	Check whether the device is in pairing state (in Bluetooth mode) or try to restart the device and perform Bluetooth pairing again.

NOW:GO™
NowGo International Co.,Ltd
Address:BldgA ,Jinwen Xifang Industrial Zone, Songyu Road, Songgang Sub-district, Bao'an Dist., Shenzhen
Email: info@nogoav.com
+86-755-29603500

www.nowgoav.com Made in China

Product After-sales Service Regulations

Product warranty regulations

1. NOWGO digital mobile speakers comply with the relevant national three guarantee regulations .
2. If the user has a quality problem caused by Factory under normal operation according to the product manual , please present the warranty card and purchase invoice to the product dealer to provide warranty service .
3. Product quality issues do not include the user's personal subjective objections to the product's sound quality performance .
4. The date of purchase shall be based on the date of purchase receipt. If valid proof cannot be provided , the purchase date shall be based on the production date .
5. Product accessories, consumables and optional parts (such as batteries, cables, chargers, casings, printed matter, etc.) are not covered by the warranty.
6. Unless otherwise stipulated by law , our company will not compensate for incidental losses caused by the failure of this product .
7. Free warranty service will not be provided in the following situations :
   1. Failure to present a valid warranty card and purchase invoice (except where the product can be guaranteed to be within the validity period of the three guarantees)
   2. Damage caused by failure to use, maintain, and store the product in accordance with the instructions for use ;
   3. Damage caused by falling, water intrusion, improper storage, etc. after purchase ;
   4. Damage caused by repair, modification, disassembly, and cleaning at a non- NOWGO authorized maintenance agency.
   5. Damage caused by the use of accessories or consumables recommended by NOWGO (batteries, chargers, cables, adapters, etc.
   6. Failures due to natural disasters and other man-made irresistible natural disasters, abnormal voltage and other external factors.
8. Please keep the warranty card properly . If the warranty card is lost, it will not be reissued.

Product Technical Support

1.Hotline number :
We provide users with full marketing chain services and support before, during, and after sales. If you need to inquire about any product information (operation mode, specifications, connection methods, authorized maintenance agents, etc.), please contact the NOWGO hotline center .
NOWGO hotline center contact number : 400-606-9918
2.Official homepage : http :www.nogoav.com
3. Official email : info@nogoav.com

NOW:GO™

PRODUCT CERTIFICATION

If you need after-sales consultation or help, please scan the code to add Rogo WeChat customer service:

CCC	3C certification (national compulsory product certification)
	Safe for use in non- tropical climates only
	Only suitable for safe use in areas below 2000meters above sealeve
	Electronic information product recycling sign
	WEEE waste electronic and electrical product recycling sign(not suitable for mixed dumping with domestic waste)

Русский

Важно!

1, Внимательно ознакомьтесь с прилагаемой инструкцией и следуйте всем указаниям.
2, Храните и используйте устройство при комнатной температуре.
3, Не используйте устройство при высокой температуре, например, под прямыми солнечными лучами, рядом с открытым огнем или при других подобных условиях.
4, Не бросайте устройство и не подвергайте его сильным ударам.
5, Если кабель не соответствует требованиям вашего устройства, обратитесь к продавцу.
6, Во время воспроизведения музыки настройте ее на соответствующую громкость, чтобы избежать повреждения слуха.
7, Ремонт устройства, независимо от причины повреждения, должны выполнять специалисты по техническому обслуживанию и ремонту. Несанкционированный разбор устройства приведет к аннулированию гарантии.
8, Устройство изготовлено из высокоэффективных материалов и компонентов, Не выбрасывайте устройство вместе с другими бытовыми отходами. Ознакомьтесь с местной системой раздельного сбора электронного и электрического оборудования и аккумуляторов. Правильная утилизация оборудования - это вклад в защиту окружающей среды, здоровья человека, а также сохранение и рациональное использование природных ресурсов.

2. Влагозащита IPX6
Устройство обладает пыле- и влагозащитой IPX6 теперь не стоит переживать на счет дождя или попадания воды. Высокое качество сборки и использование прочных материалов позволяют вам наслаждаться прекрасным звуком вдали от городской суеты.
3. Емкость аккумулятора 5200 мАч
Встроенный аккумулятор большой емкости — 5200 мАч, который способен воспроизводить любимую музыку до 12 часов без подзарядки, что делает колонку F8 прекрасным помощником в проведении любых мероприятий на свежем воздухе.
4. Новый стандарт Bluetooth 5.3
Технология Bluetooth 5.3 обеспечивает высокую скорость передачи данных, более плавную и стабильную работу, а также низкое энергопотребление, что позволяет наслаждаться глубоким качеством звука.
5. Яркая подсветка
Подсветка на колонке служит не только для красоты, но и для создания атмосферы. Она может работать как в такт музыке, так и независимо от нее, создавая световое шоу, что позволяет подобрать подходящий вариант для любого настроения и обстановки.
6. Встроенный эквалайзер
В данной колонке есть возможность выбора одного из трех предустановленных режимов работы эквалайзера: стандартный, классический и с усиленными низкими частотами. Данная особенность позволяет адаптировать звук под свои предпочтения и условия прослушивания.
7. Удобный ремешок для переноски
В комплекте есть удобный ремешок для переноски, что позволяет взять с собой колонку F8 в любое приключение. Удобная система регулировки и качественные материалы помогут закрепить колонку там, где вы пожелаете.
8. Функция «Громкая связь»
Благодаря функции «громкой связи» вы можете ответить на звонок, что позволит вам наслаждаться наслаждаться свободой в любом месте.
9. Широкие возможности воспроизведения музыки
Колонка F8 поддерживает большое количество музыкальных форматов, а именно, MP3, APE, FLAC, WAV, WMA. Кроме того, есть поддержка Bluetooth, TWS, воспроизведение через AUX-вход или с карты памяти MicroSD.

Особенности устройства

1. Мощный звук и качественные динамики
Главным преимуществом портативной колонки F8 является ее мощность — 40 Вт. Благодаря двум мощным и качественным динамикам, диаметром 66 мм, и двум пассивным излучателям колонка обеспечивает четкое и качественное звучание. Современная конструкция диффузоров полностью раскрывает всю полноту и глубину сцены.

Комплектация

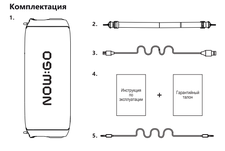

1. Колонка F8
2. Ремешок для переноски
3. Кабель питания USB Type-C
4. Инструкция по эксплуатации + Гарантийный талон
5. Аудио кабель AUX

Функции кнопок на корпусе

1. Включение/выключение
• Включение: нажмите и удерживайте кнопку в течение 3-х секунд
• Выключение: нажмите и удерживайте кнопку в течение 3-х секунд

2. Подсветка
• Короткое нажатие на кнопку переключает режимы подсветки (3 режима, выключение подсветки)

3. Режим
• Короткое нажатие на кнопку переключает режимы воспроизведения (Bluetooth, AUX, MicroSD)

4. Воспроизведение/пауза
• В режиме Bluetooth и при воспроизведении с карты памяти MicroSD: короткое нажатие на кнопку ставит воспроизведение на паузу, При воспроизведении с AUX-входа, короткое нажатие на кнопку отключает звук.
• Ответить на входящий звонок: короткое нажатие на кнопку для ответа на вызов
• Отключение входящего звонка: нажмите и удерживайте кнопку в течение 2-х секунд для отключения вызова
• Завершить вызов: короткое нажатие на кнопку во время разговора для завершения вызова
• Активация голосового помощника: нажмите и удерживайте кнопку в течение 3-х секунд для активации голосового помощника
• Переключение между папками в режиме воспроизведения с карты памяти MicroSD: при воспроизведении с карты памяти MicroSD, нажмите и удерживайте кнопку в течение 3-х секунд для переключения на следующую папку

5. Уменьшение громкости/предыдущая песня
• Короткое нажатие: уменьшение громкости
• Долгое нажатие: переключение песни на предыдущую

6. Увеличение громкости/следующая песня
• Короткое нажатие: увеличение громкости
• Долгое нажатие: переключение песни на следующую



7. Слот для карты памяти MicroSD
• Вставьте карту памяти формата MicroSD (приобретается отдельно) для воспроизведения музыки с карты памяти

8. Разъем USB Type-C
• Для зарядки колонки используйте кабель питания USB Type-C и адаптер питания с номинальным напряжением и током 5В/2А

9. AUX-вход
• Подключите аудио кабель 3,5 мм для воспроизведения музыки через AUX-вход.

10. Сброс настроек
• Нажмите и удерживайте кнопку сброса до заводских настроек в течение нескольких секунд.

Автоматическое управление питанием и энергосберегающий режим
• При отсутствии соединения колонка автоматически отключится через 15 минут
• Индикатор питания автоматически погаснет через 5 секунд после включения. Коротко нажмите на кнопку включения во время использования, индикатор заряда аккумулятора загорится на 5 секунд. Во время зарядки индикатор горит постоянно.

Индикация уровня заряда аккумулятора
Значение индикации:
• При уровне заряда аккумулятора от 6% до 20%, светодиод LED1 горит красным
• При уровне заряда аккумулятора от 20% до 30%, светодиод LED1 горит белым

• При уровне заряда аккумулятора от 30% до 50%, светодиоды LED1 и LED2 горят белым
• При уровне заряда аккумулятора от 50% до 75%, светодиоды LED1, LED2 и LED3 горят белым
• При уровне заряда аккумулятора от 75% до 100%, все четыре светодиода горят белым

Индикация процесса зарядки
• Если уровень заряда аккумулятора менее 15 %, светодиод LED1 мигает белым
• Если уровень заряда аккумулятора от 15% до 50%, светодиод LED1 горит белым, а LED2 мигает
• Если уровень заряда аккумулятора от 50% до 75%, светодиоды LED1 и LED2 горят белым, а светодиод LED3 мигает
• Если уровень заряда аккумулятора от 75% до 99%, светодиоды LED1, LED2 и LED3 горят белым,а светодиод LED4 мигает
• Если аккумулятор полностью заряжен — все четыре светодиоды горят белым

Соединение по Bluetooth



Выполните сопряжение колонки с планшетом или смартфоном с поддержкой Bluetooth.
• Нажмите и удерживайте кнопку питания, чтобы включить колонку. Загорится синий светодиод и колонка перейдет в режим Bluetooth по умолчанию. Колонка готова к сопряжению
• Перейдите в «Настройки» на вашем смартфоне/планшете, включите режим Bluetooth и выполните поиск устройства. В списке устройств Bluetooth выберите колонку NOWGO F8 и выполните сопряжение
• Если соединение установлено успешно, то вы услышите звуковой сигнал. После успешного подключения можно воспроизводить музыку или совершать звонки по громкой связи на устройстве

• Беспроводное покрытие составляет около 30 м (в зависимости от эксплуатационных условий). Передача музыки может быть прервана из-за препятствий между смартфоном и колонкой, или попробуйте переключиться на другое устройство Bluetooth, загруженное или других блокирующих устройств, работающих на той же частоте

Примечание:

• При включении колонка автоматически подключается к последнему подключенному устройству без повторного поиска по Bluetooth. Повторное сопряжение по Bluetooth не требуется
• Если необходимо подключиться к другим Bluetooth-устройствам, нажмите на кнопку «Bluetooth», чтобы прервать соединение с текущим устройством, при этом замигает синий индикатор, после чего колонка готова к сопряжению с другим Bluetooth-устройством

Устранение неполадок

Прерывистый звук в режиме Bluetooth	1) Убедитесь, что расстояние между колонкой и Bluetooth-устройством составляет более 10 метров. 2) Убедитесь, что между колонкой и Bluetooth-устройством нет препятствий, 3) Попробуйте переключиться на другое Bluetooth-устройство.
Отсутствует звук с аудиокнопок	1) Убедитесь, что аудиокабель подключен правильно. 2) Убедитесь, что аудиокард подключенного устройства работает правильно. 3) Проверьте подключение на соответствующем аудиовходе.
Отсутствует звук/ неверный формат в режиме карты памяти	1) Убедитесь, что на носителе установлен формат FAT32, 2) Убедитесь, что файлы на носителе имеют формат APE, FLAC, MP3, WMA, WAV.
Кнопки не реагируют на нажатие	1) Выключите устройство и поставьте на зарядку на 30 минут, 2) Нажмите и удерживайте кнопку сброса для сброса устройства до заводских настроек.
Нет звука из динамика	1) Попробуйте увеличить громкость, 2) Выберите правильный канал на аудиовходе, 3) Убедитесь, что все аудио кабели подключены правильно.

Шум из динамика	1) Убедитесь, что все аудиокабели подключены правильно, 2) Замените аудиокабели, 3) Убедитесь, что на аудиовыходе подключенного устройства отсутствуют шумовые искажения,
Колонка не заряжается	1) Убедитесь, что кабель USB Type-C правильно подключен к соответствующему порту на колонке и адаптеру питания, 2) Убедитесь, что номинальное напряжение и ток адаптера питания соответствуют требованиям, 3) Протестируйте кабель и адаптер питания на предмет неисправности.
Не удалось выполнить сопряжение по Bluetooth	1) Убедитесь, что устройство находится в состоянии сопряжения (в режиме Bluetooth), 2) Перезагрузите устройство и повторите процедуру сопряжения по Bluetooth,

Технические характеристики

Модель: F8
Динамики: 66 мм (2,5"), 2 шт. + пассивные излучатели, 2 шт.
Номинальная вых. мощность: 40Вт
Время работы, ч: до 12 (при средним уровне громкости)
Версия Bluetooth: 5,3
Класс влагозащиты: IPX6
Режим воспроизведения: Bluetooth/AUX-вход/MicroSD
Форматы файлов: MP3/WMA/WAV/APE/FLAC
Источник питания: встроенный аккумулятор, литийиевый, 5200 мАч
Входное напряжение и ток: 5В/2А, переменный ток
Разъем питания: USB Type-C
Размер устройства, мм: диаметр 100 х высота 260 (без ремешка)
Вес нетто, кг: 1,4

Импортер: ООО "АВАЛОН", Адрес импортера: 196128, г. Санкт-Петербург, Новоизмайловский пр-т, д. 10, ЛитА, пом.21Б, тел. 8-800-511-31-63, По вопросам сервиса обращаться: warranty@avalonica.ru, Эл. почта для заказа: offer@avalonica.ru Срок гарантии 1 год, Срок службы: 3 года, Изготовитель: Китай, Условия хранения: хранить в помещениях при температуре от +5 до +40 °С при умеренной влажности, Беречь от прямых солнечных лучей, Не соответствует требованиям ТР ТС 020/2011, ТР ЕАЭС 037/2016, Правила использования и техника безопасности указаны в инструкции по эксплуатации.

AVALONICA

Россия, город Москва Тел: 8(800)511-31-63
E-mail: warranty@avalonica.ru

Гарантийный талон

Компания - поставщик товара ООО «АВАЛОН» благодарит Вас за выбор и надеется на долговременную работу изделия без полосок и нарекваний. В обеспечение обязательств по качеству товара действуют нижеизложенные условия гарантии.
1. Гарантийный срок на изделия Торговой марки AVALONICA составляет 1 (один) год с даты покупки.
2. Срок службы изделия Торговой марки AVALONICA составляет 3 (три) года с даты покупки. Гарантия не подлежит аксессуарам, входящим в комплект изделия, Гарантия не подлежит следующим случаи:
   1. Если изделие, предназначенное для использования в личных, бытовых, семейных целях использовалось в предпринимательских, коммерческих, профессиональных или иных целях.
   2. Нарушены правила или условия эксплуатации, установки, монтажа изделия, изложенные в Руководстве пользователя или другой документации, поставляемой в комплекте с изделием,
   3. Если изделие имеет следы несанкционированного ремонта, повреждения вследствие использования некачественных запасных частей или принадлежностей,
   4. Если изделие повреждено вследствие воздействия механических, химических, электромагнитных воздействий, высоких или низких температур, коррозии, окисления, попадания внутрь посторонних предметов, веществ, других жидкостей, насекомых или животных,
   5. Если изделие вышло из строя вследствие естественного износа при эксплуатации, старения частей изделия или внешнего вида из-за длительного использования изделия.
Гарантийный талон действителен только при наличии четко заполненного талона на изделие, серийного номера изделия (при наличии), даты продажи, индивидуальной коробки (при возможности сохранения коробку до конца гарантийного срока), четких печатей фирмы-продавца, подписи покупателя,

Модель товара: _____ Серийный номер (при наличии): _____
Дата продажи: _____ Печать продавца

Настоящим удостоверяю, что качество товара и его комплектность проверены, с условиями гарантии ознакомлен(а)

_____ /Подпись Покупателя/